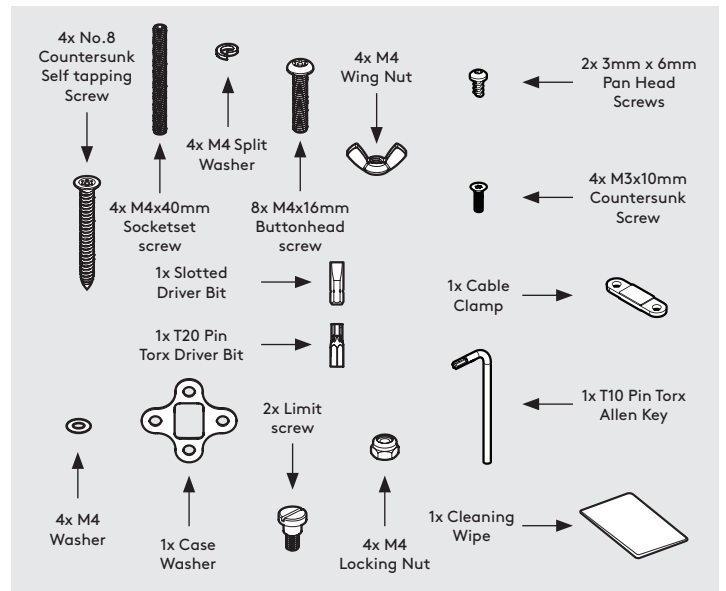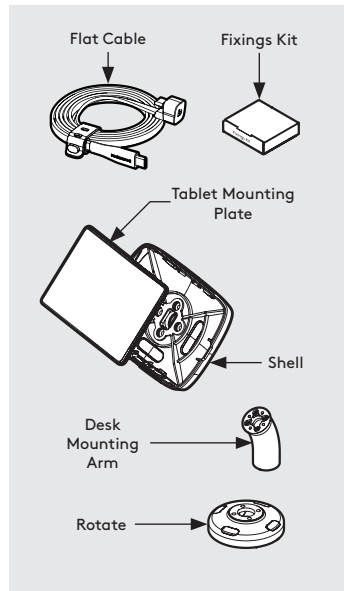# bouncepad®

Core Swivel Desk
Assembly Instructions

Tools Required:

- Pencil
- Electric Drill
- 7mm Spanner *or adjustable spanner*
- 5.0mm Drillbit *if fixing from below*
- 2.5mm Drillbit *if fixing from above*
- 16mm Holesaw *if routing the tablet cable through your mounting surface*
- Socket Driver

In the Box

- Flat Cable
- Fixings Kit
- Tablet Mounting Plate
- Shell
- Desk Mounting Arm
- Rotate

Fixings List

- 4x No.8 Countersunk Self tapping Screw
- 4x M4x40mm Socketset screw
- 4x M4 Split Washer
- 8x M4x16mm Buttonhead screw
- 4x M4 Wing Nut
- 2x 3mm x 6mm Pan Head Screws
- 4x M3x10mm Countersunk Screw
- 1x Slotted Driver Bit
- 1x T20 Pin Torx Driver Bit
- 1x Cable Clamp
- 4x M4 Washer
- 1x Case Washer
- 2x Limit screw
- 4x M4 Locking Nut
- 1x T10 Pin Torx Allen Key
- 1x Cleaning Wipe

* Due to the modular nature of our product range you may receive additional fixings in the fixings kit


A — Follow steps A if "Fixing from above".

Minimum Mounting surface thickness :
Metric **34**mm   Imperial **1 5/16"**

Maximum Mounting surface thickness :
Metric **25**mm   Imperial **1"**
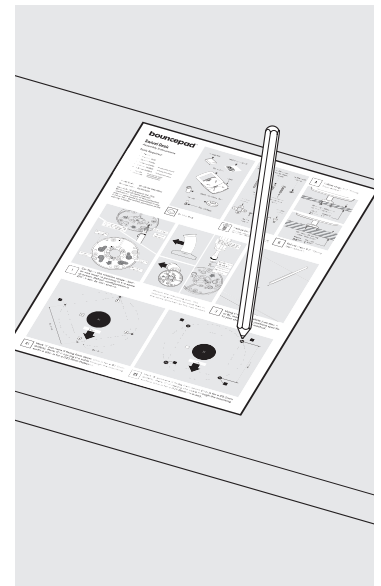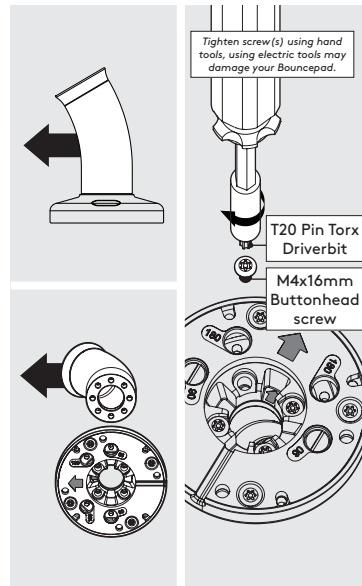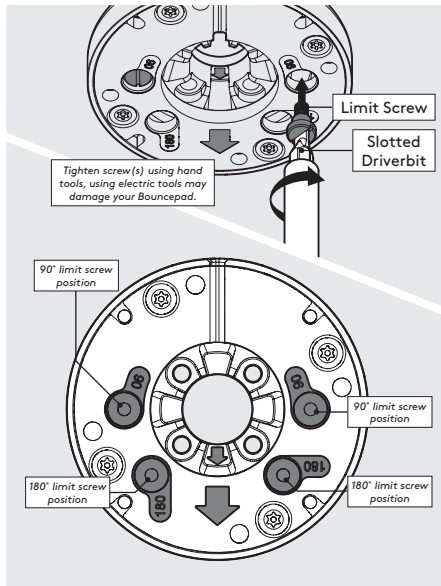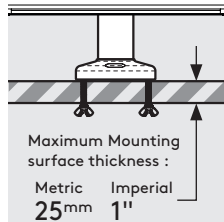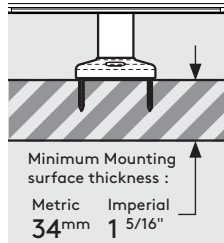
B — Follow steps B if "Fixing from below".

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

Limit Screw
Slotted Driverbit

90° limit screw position
180° limit screw position

1 — Configure the rotation range - both arrows must point in the same direction. Default configuration is 270°. Insert 2x limit screws.

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

T20 Pin Torx Driverbit
M4x16mm Buttonhead screw

2 — Attach the Desk Arm. The Desk Arm must lean forward in the same direction as the two arrows.

3 — Using the hole template (see step A or B), mark the hole positions specific to your chosen fixing method.
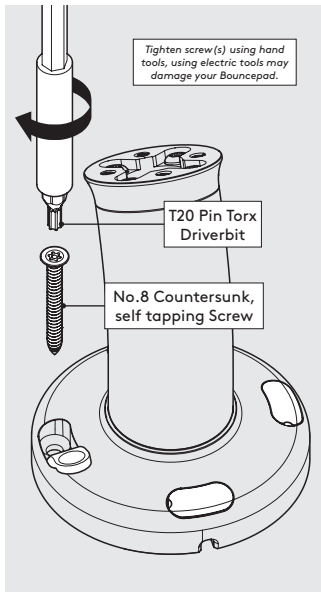

Front
46.0mm
Ø65.5mm
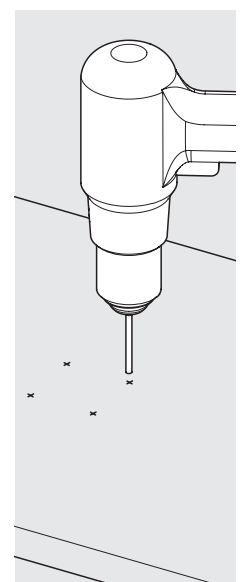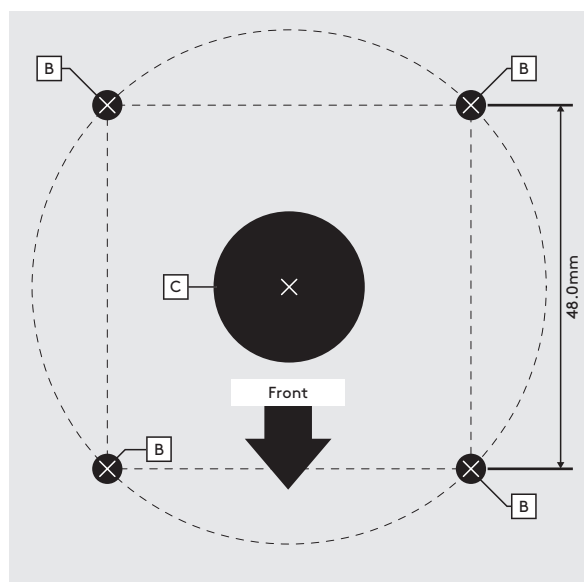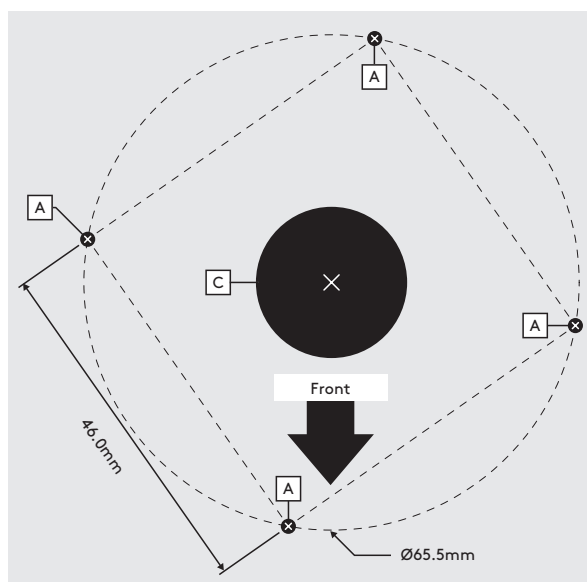
A1 — Mark 'A' positions for "Fixing from above" (Ø2.5mm drillbit). Mark 'C' for the cable hole. (Ø20.0mm Holesaw).

Front
48.0mm

B1 — Mark 'B' positions for "Fixing from below" (Ø5.0mm drillbit). Mark 'C' for routing the cable hole. (Ø20.0mm Holesaw).
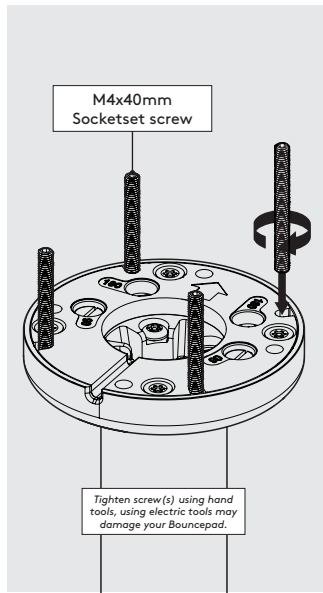
4 — Drill the required holes.
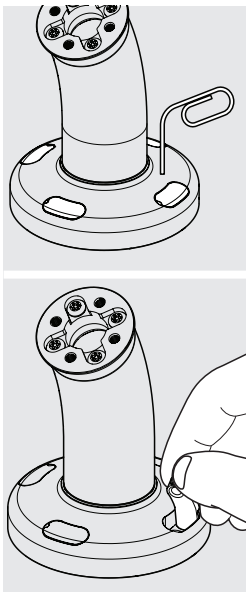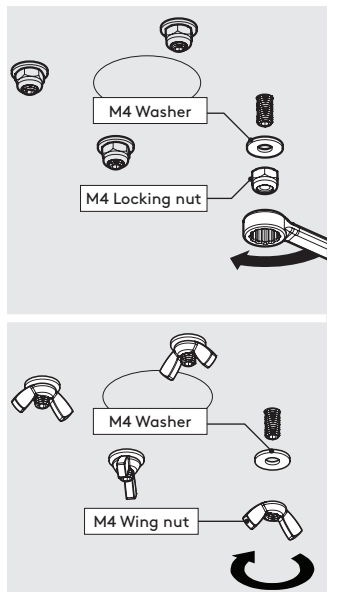
A2 — Lift & hold the rubber screw covers.

**A3** — Secure the Rotate to the mounting surface, then close the covers.

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

T20 Pin Torx Driverbit

No.8 Countersunk, self tapping Screw

A4 — Go to step 5

B2 — Screw in the 4x Socket Set Screws. Ensure full thread engagment.

M4x40mm Socketset screw

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

B3 — Secure to the surface. Locking nuts offer greater security.

M4 Washer

M4 Locking nut

M4 Washer

M4 Wing nut

B4 — Go to step 5.

Tighten screw(s) using hand tools, using electric tools may damage your Bouncepad.

T20 Pin Torx Driver Bit
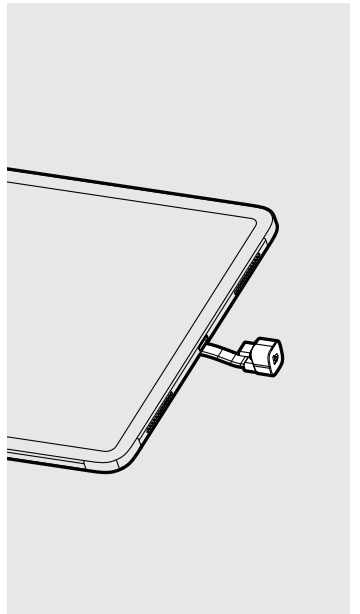
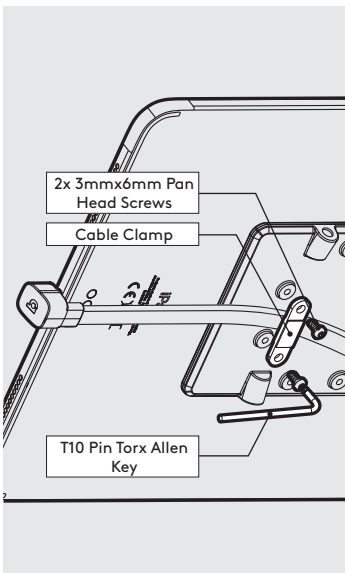M4x16mm Buttonhead screw

M4 Split Washer

Case Washer
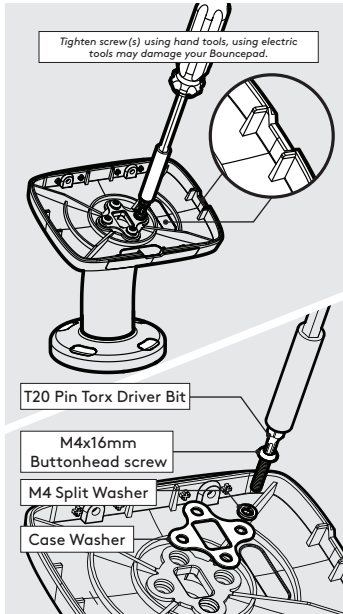
5 — Locate & attach the Shell to the Desk in the correct orientation.
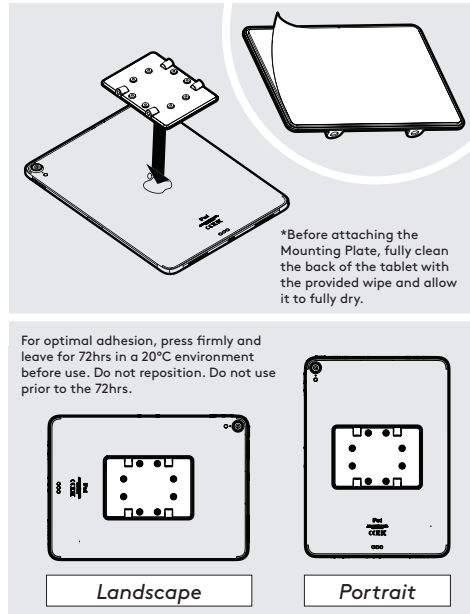
6 — Remove the Mounting Plate adhesive backing. Attach level & centrally to the Tablet back as shown.
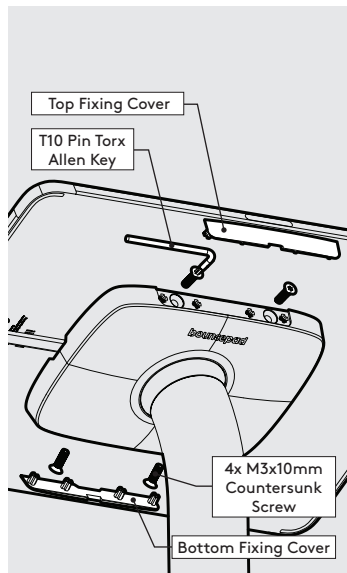
*Before attaching the Mounting Plate, fully clean the back of the tablet with the provided wipe and allow it to fully dry.

For optimal adhesion, press firmly and leave for 72hrs in a 20°C environment before use. Do not reposition. Do not use prior to the 72hrs.

Landscape

Portrait

7 — Attach the Flat Cable to the Tablet with the U-Bend Head.

8 — Secure the Flat Cable to the Mounting Plate with the Cable Clamp as shown.

2x 3mmx6mm Pan Head Screws

Cable Clamp

T10 Pin Torx Allen Key
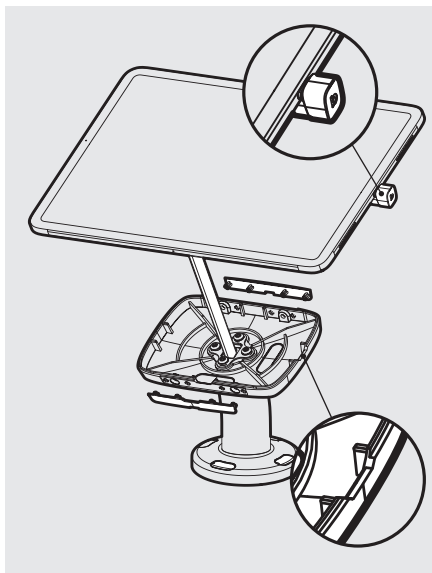
9 — Remove the Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

10 — Secure the Tablet to the Shell & attach the Fixing Covers as shown.

Top Fixing Cover

T10 Pin Torx Allen Key

4x M3x10mm Countersunk Screw

Bottom Fixing Cover
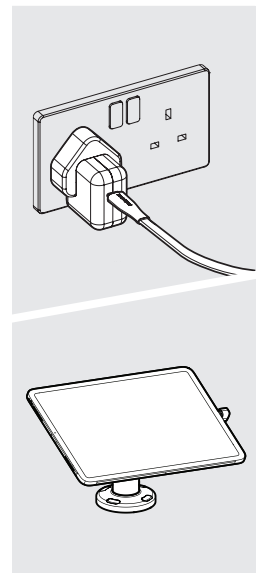
11 — Connect tablet to power & installation is now complete.