## bouncepad®

## Core Static 60


Assembly Instructions

## Tools Required:


- Pencil
- Electric Drill
- 7mm Spanner
- 5.0mm Drillbit 2.5mm Drillbit
- 16mm
- Holesaw
- Socket Driver

Sheet Code: BP-IM-080 REV1 Release Date: 06/08/2024

Copyright 2024 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.

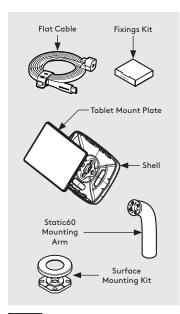




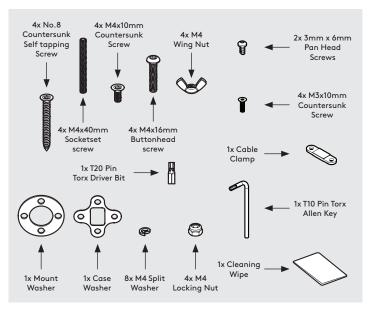






Fixings List

of our product range you may receive additional fixings in the fixings kit

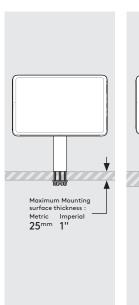



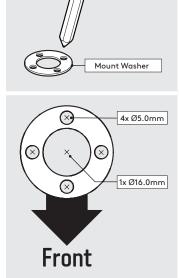

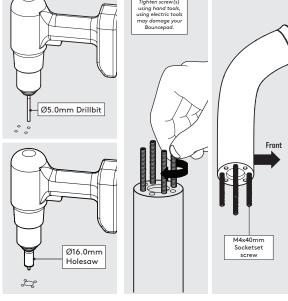

A

Follow steps A if "Fixing from below". B

Follow steps B if "Fixing from Above".

**A1** 


Using the Mount washer, mark the drill hole locations.

Mount Plate

Drill each hole **A2** - using the specified drill.

**A3** 

Locate and screw the Socket screws into the Desk as shown

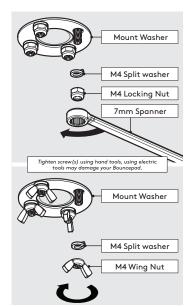


Secure the arm to the A4 surface. Locking Nuts offer higher security.




Go to step 1.


A5

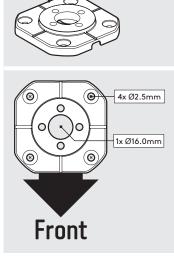



Using the Mount Plate, mark the drill hole locations as shown.

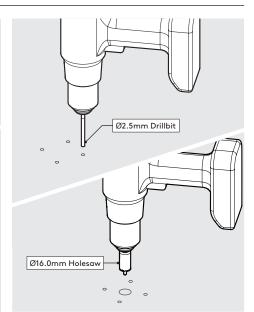


Drill each hole - using the specified **B2** drill sizes.

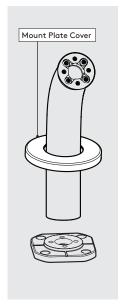

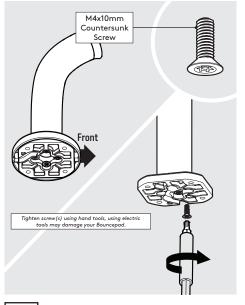

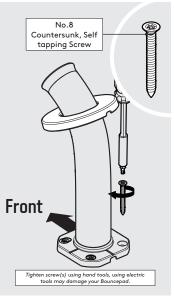

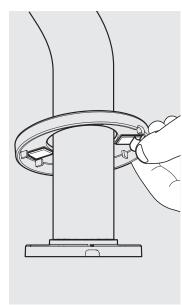


Locate the **B3** Cover onto the Static60.

Join the Static60 & Mount Plate in the orientation shown.


Secure the Static60 to **B5** the surface with the 4x countersunk fixings.

Adhere the Mount Cover **B6** onto the Mount Plate with the adhesive tabs.

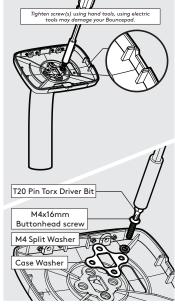





5

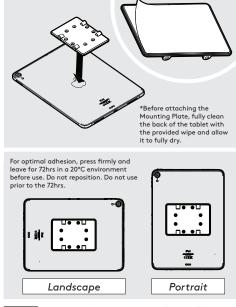

Attach the Flat Cable 3 to the Tablet with the U-Bend Head.




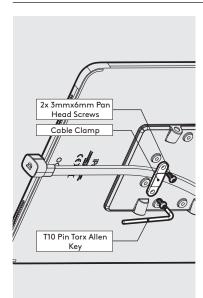


Go to step 1.

**B7** 


Secure the Flat Cable to the Mounting Plate with the Cable Clamp as shown.

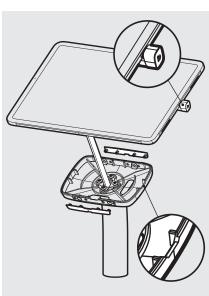

Remove the Fixing Covers. Feed the Flat Cable into the assembly & locate the Tablet in the chosen orientation.

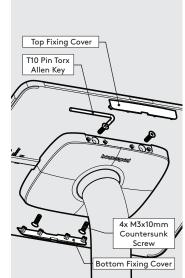

Secure the Tablet to the 6 Shell & attach the Fixing Covers as shown.

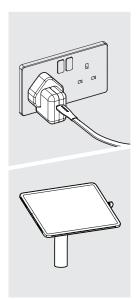

Connect tablet to power & installation is now complete.